
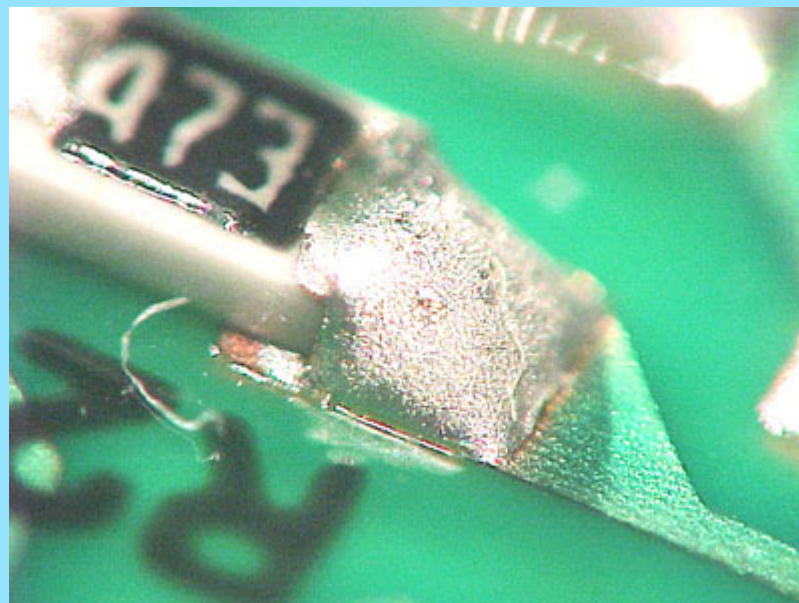
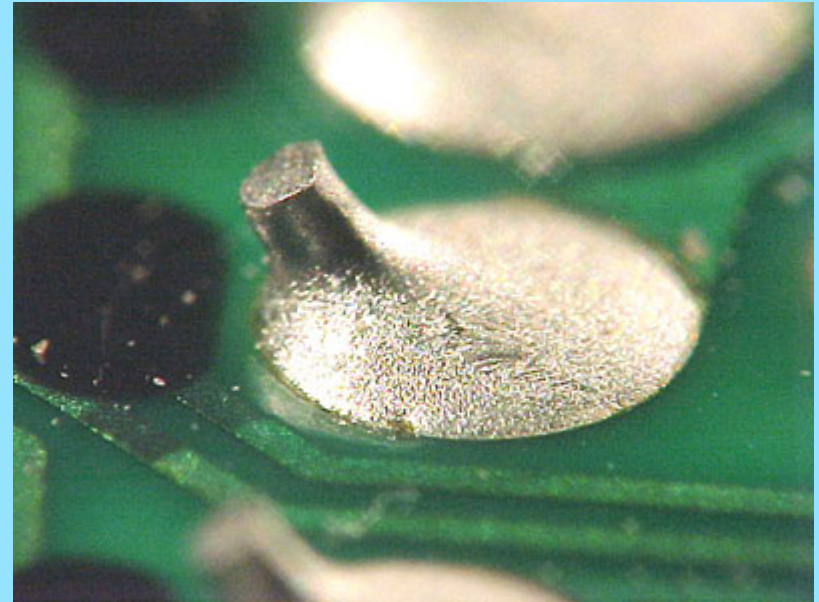



# *Lead-Free Wave Inspection*

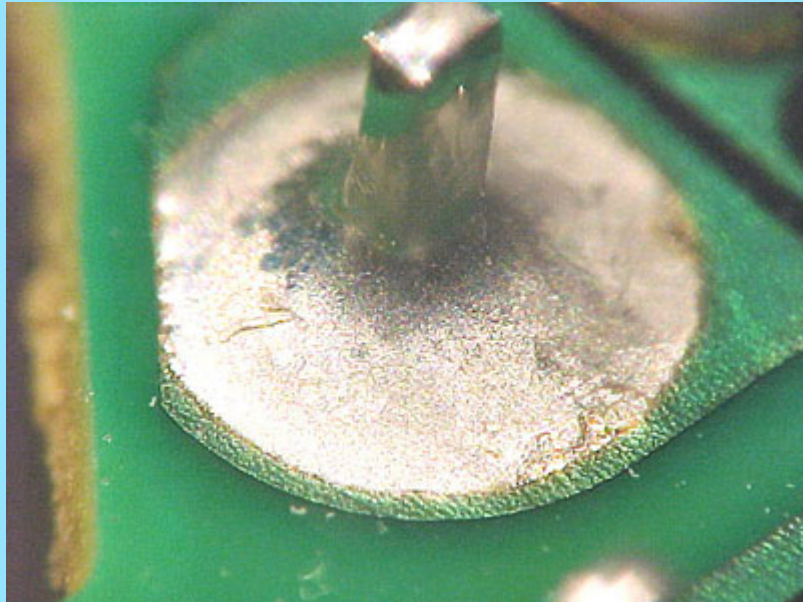

*Sn/Cu/Bi Alloy*

*Bob Willis*



# *Lead-Free Wave Inspection*

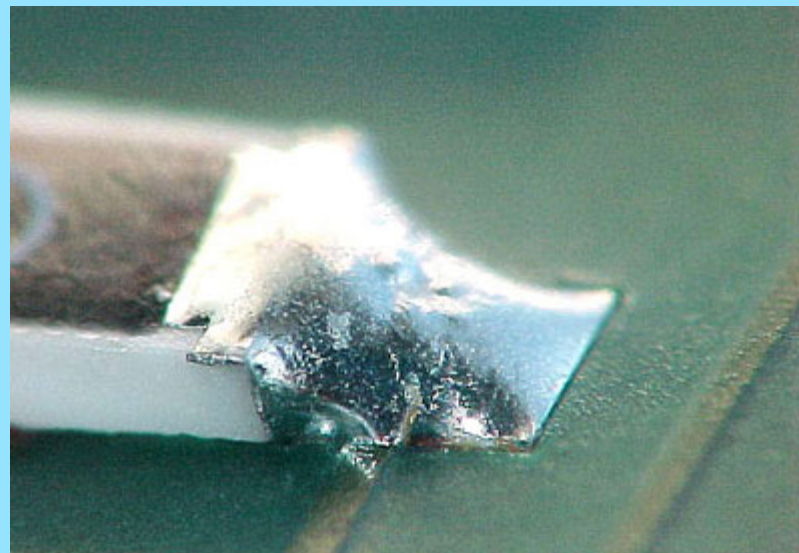

*Sn/Ag/Cu Alloy*

*Bob Willis*




# *Lead-Free Wave Inspection*

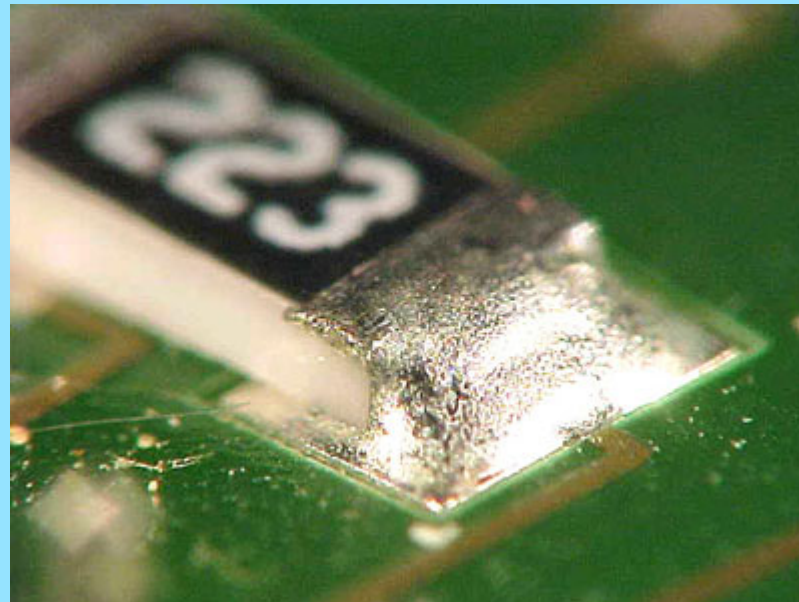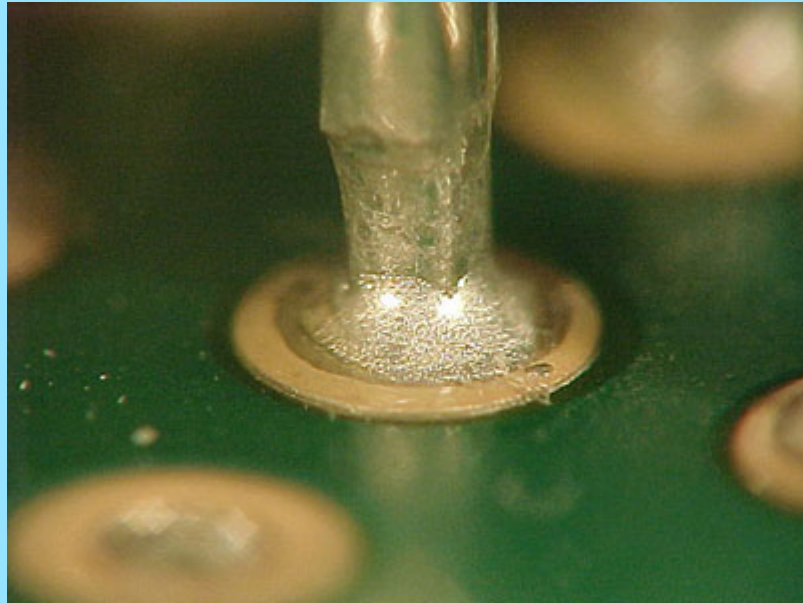


*Sn/Cu+Ni Alloy*

*Bob Willis*

# *Lead-Free Reflow Inspection*

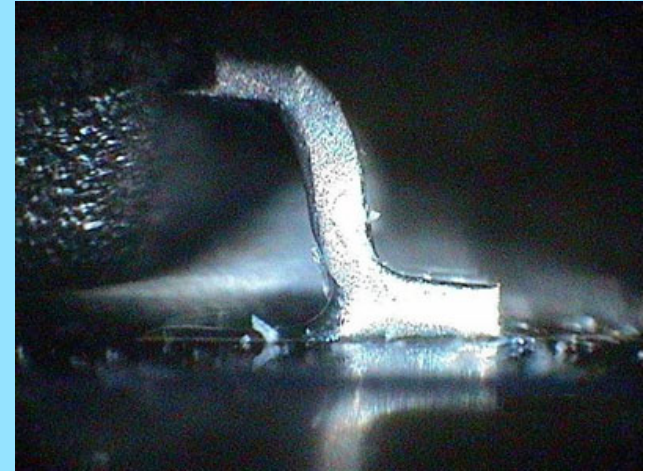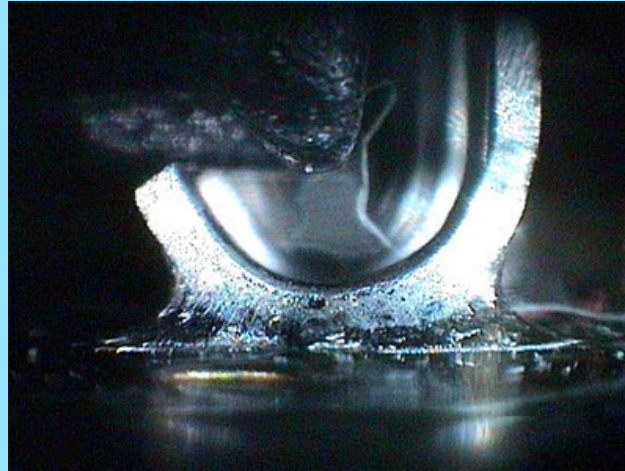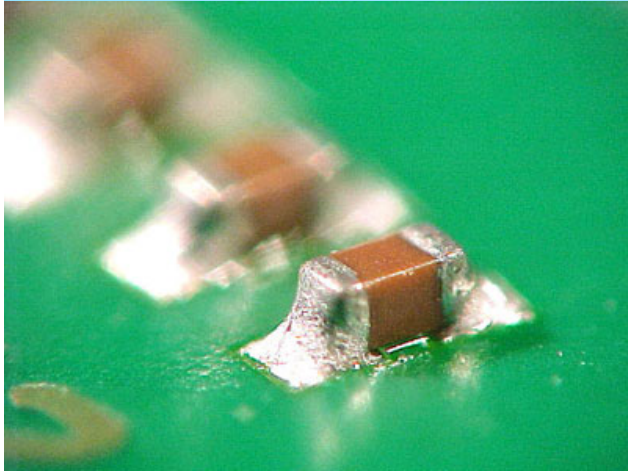

Intrusive Reflow Bottom

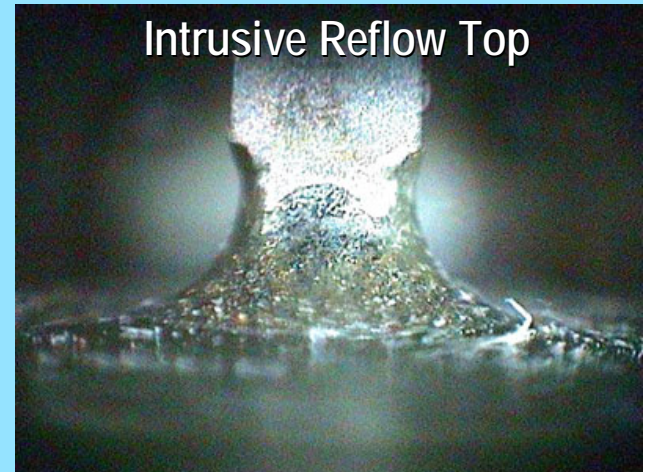


Intrusive Reflow Top


*Bob Willis*

*Sn/Ag/Cu Alloy*


# *Selective Lead-Free Solder Joints*

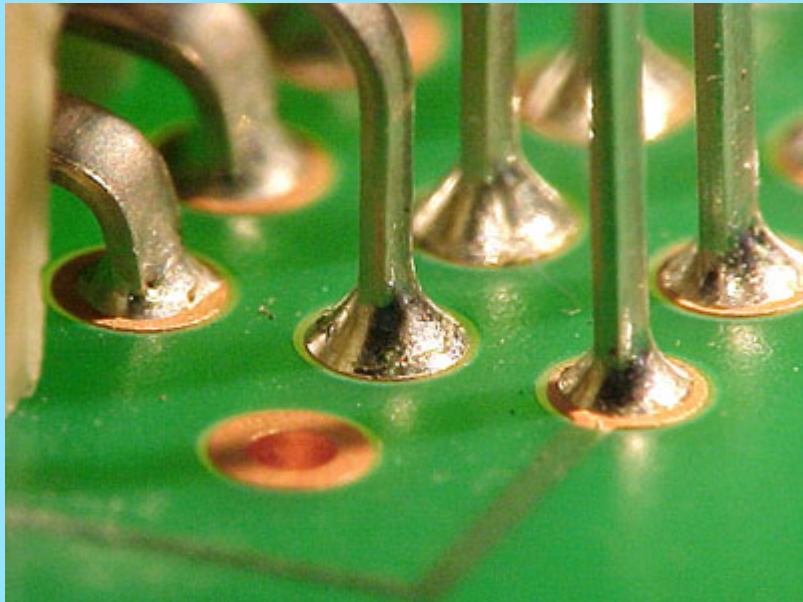


Copper OSP Boards Sn/Ag/Cu Alloy

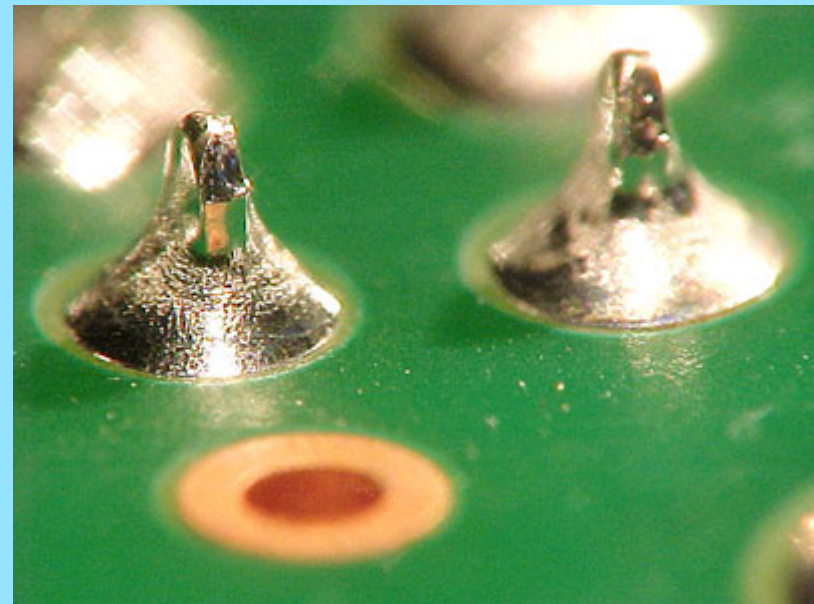

# *Selective Lead-Free Solder Joints*

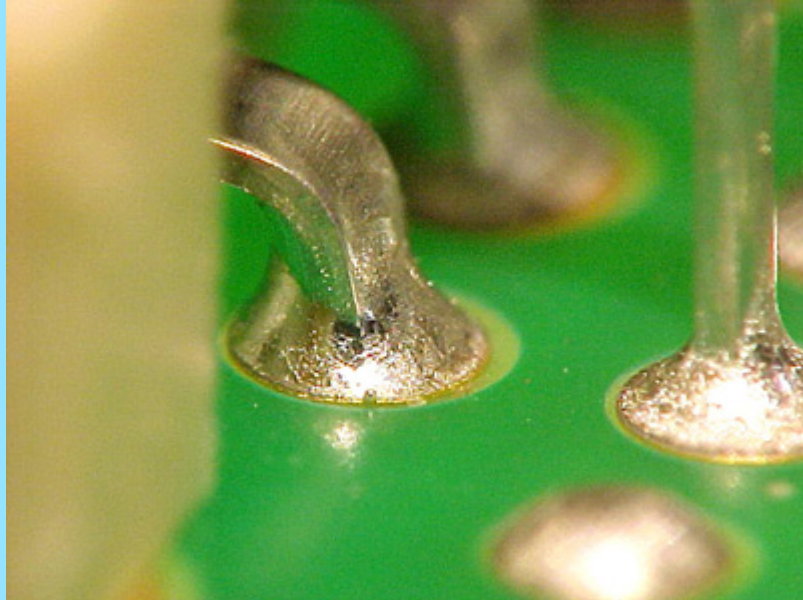


Gold Boards Sn/Ag/Cu Alloy

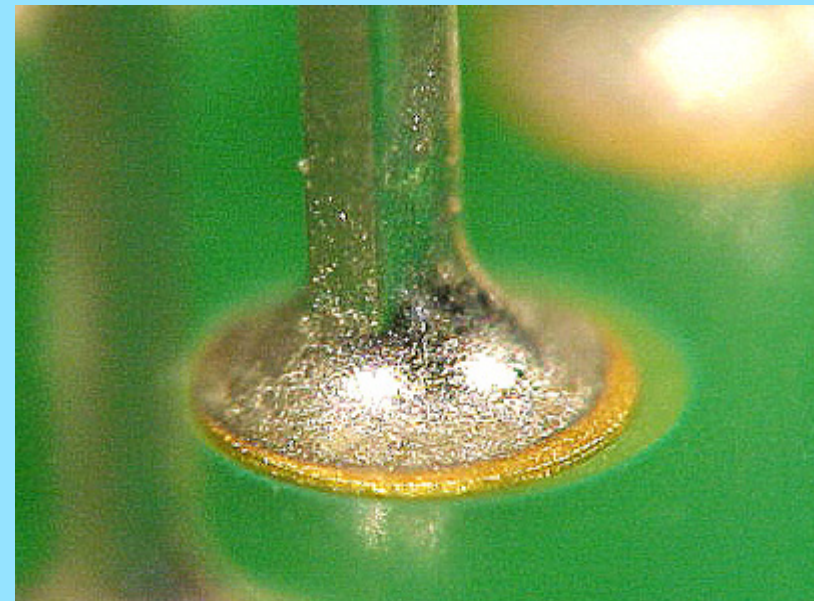


*Bob Willis*

# *Selective Lead-Free Solder Joints*

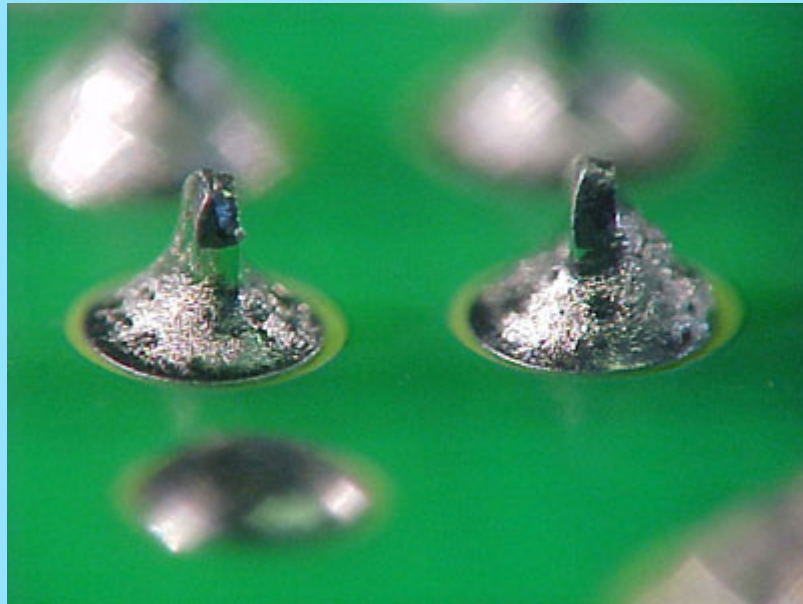


LF Solder Levelled Boards  
Sn/Ag/Cu Alloy

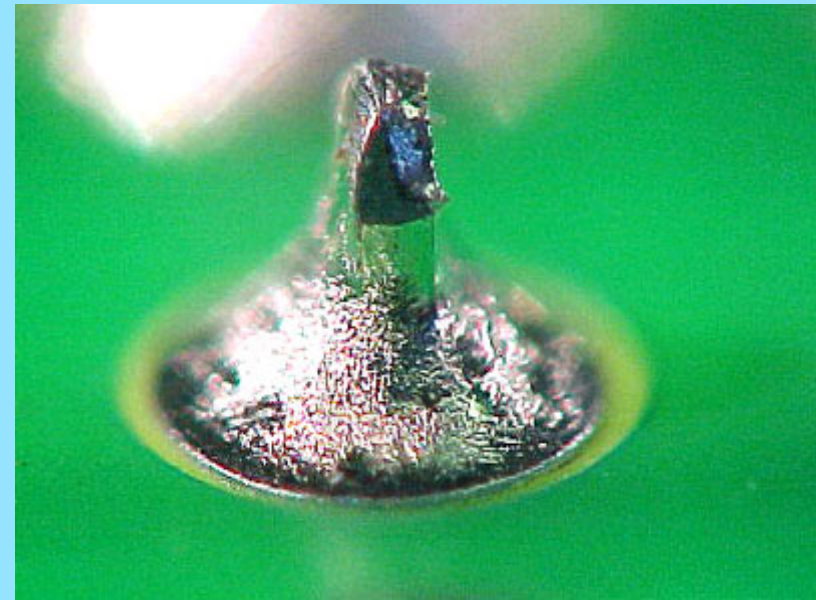


*Bob Willis*

# *Selective Lead-Free Solder Joints*

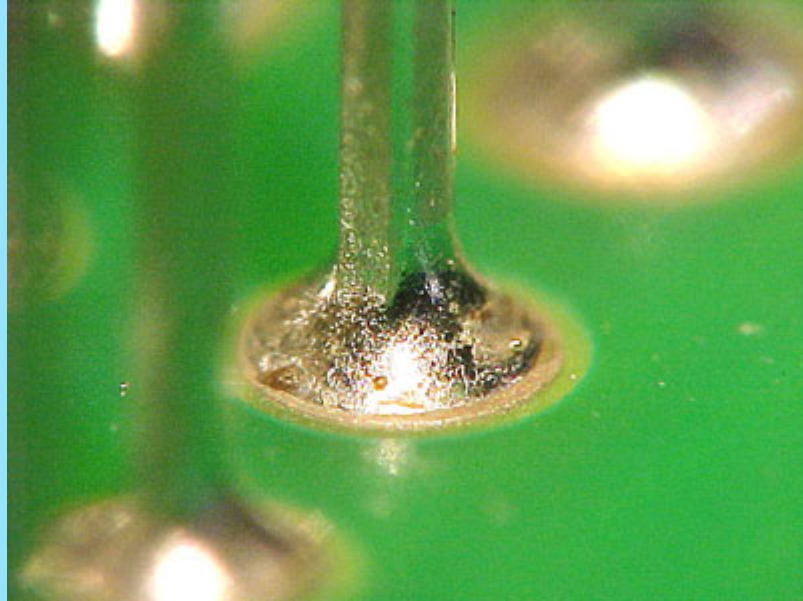

Silver Boards Sn/Ag/Cu Alloy

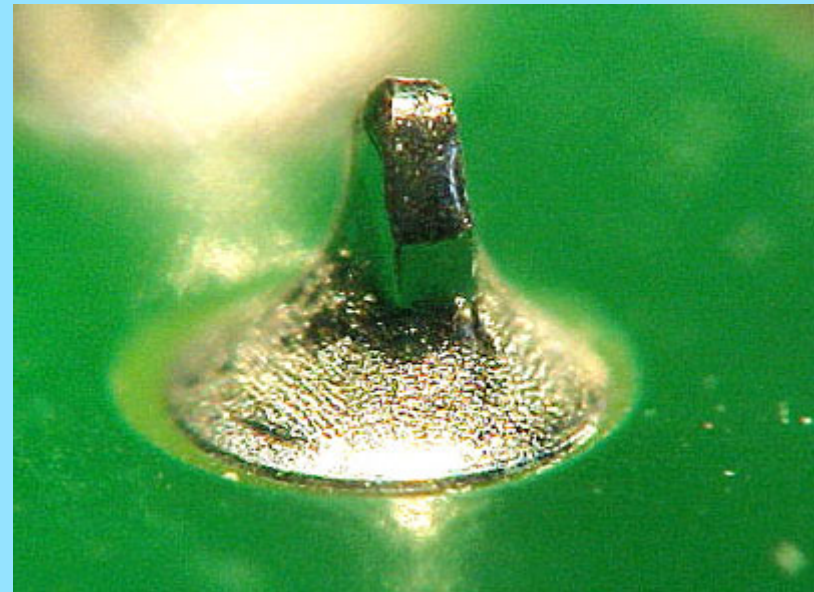

*Bob Willis*